
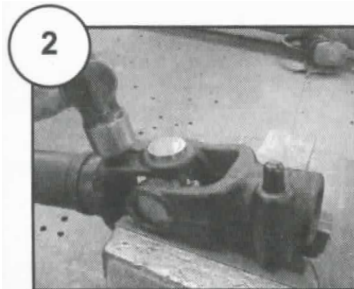


# UNIVERSAL JOINT REPLACEMENT


Here's a handy reference for replacing your U Joint (information taken from Weasler catalog).

## DISASSEMBLE UNIVERSAL JOINT


1. Remove all snap rings

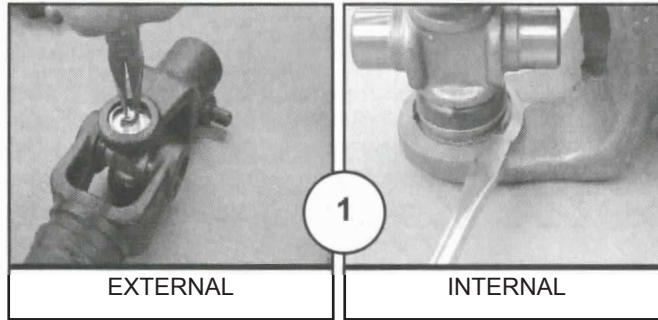

2  
Position joint in loose vice, strike top arm of unsupported yoke to drive the top cup up. Repeat on opposite side.

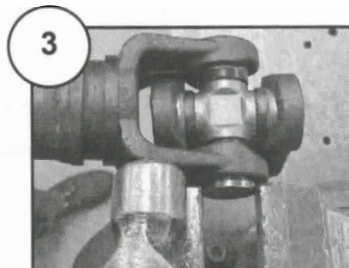


3  
Grip loosened cup in vise, strike yoke arm to drive yoke off cup. Repeat on opposite cup.

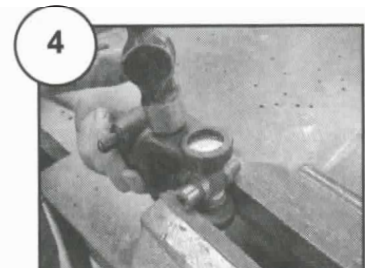


4  
Support cross in loose vise and strike yoke arm. Repeat Step 3 to remove remaining two cups.


## REASSEMBLE UNIVERSAL JOINT

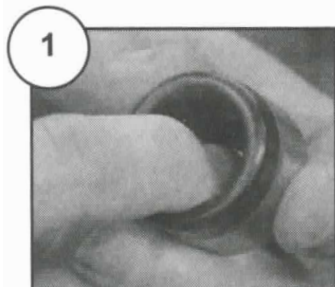


1  
Smear grease into bearings and check for dirt.  
**CAUTION:**  
MAKE SURE ALL NEEDLE BEARINGS ARE SEATED PROPERLY

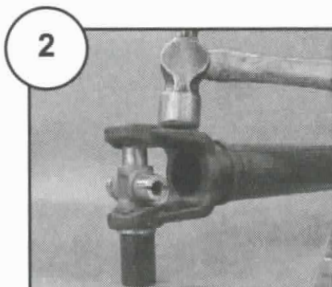


2  
Insert cup and cross. Drive in with spacer.

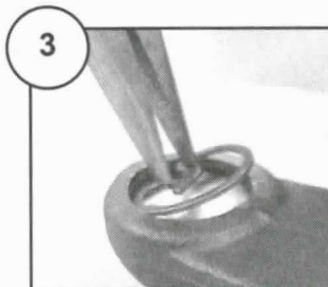


3  
Insert snap ring.

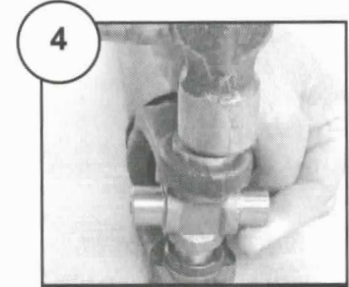


4  
Insert second cup and hold cross into cup. Drive cup flush with arm.

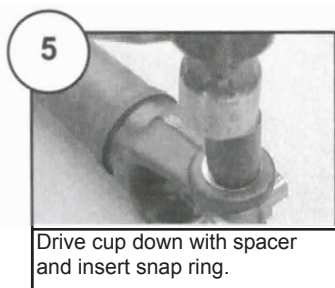


5  
Drive cup down with spacer and insert snap ring.

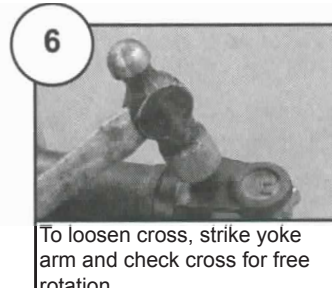

6  
To loosen cross, strike yoke arm and check cross for free rotation.

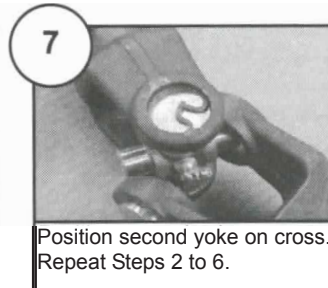

7  
Position second yoke on cross. Repeat Steps 2 to 6.

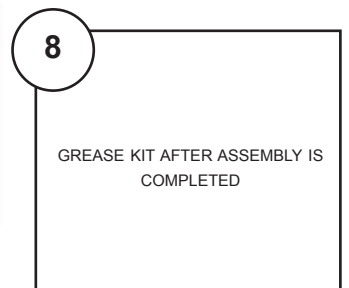

8  
GREASE KIT AFTER ASSEMBLY IS COMPLETED